



DUCT AIR LEAKAGE TESTER

QUICK START GUIDE

1

Ensure safe and secure connections to power and duct.







2

Power on the Duct Air Leakage Tester.

3

To test for accreditation, select the Accreditation option from the DALT 6905 touchscreen menu, select SMACNA, and then follow the remaining steps.

ACCREDITATION SCREENS

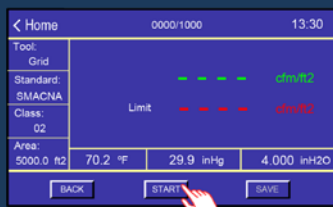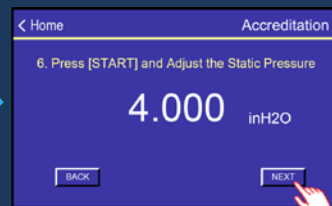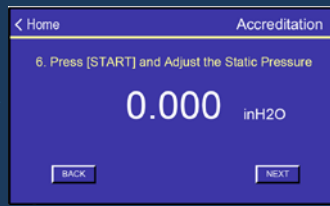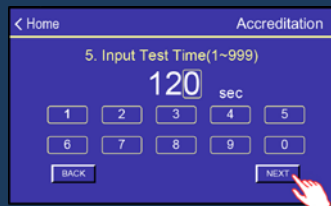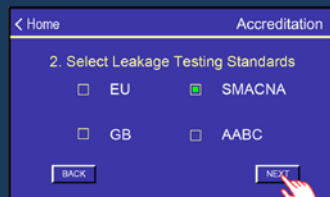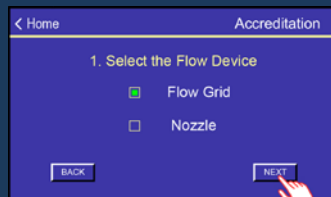

KANOMAX
The Ultimate Measurements

(800) 247-8887
KANOMAX-USA.COM